

Vertical stabilizer modification

Relocate the VS-705 nose rib and trim the VS-801pp skin referring to figure 1-1. Drill new holes in the VS-801pp skin and VS-705 nose rib using the same spacing, (*NOTE; if the nose rib has already been installed, back drill the new holes using the rib as a guide*) drill a new hole at the first location fwd of the spar left and right maintaining edge distance.

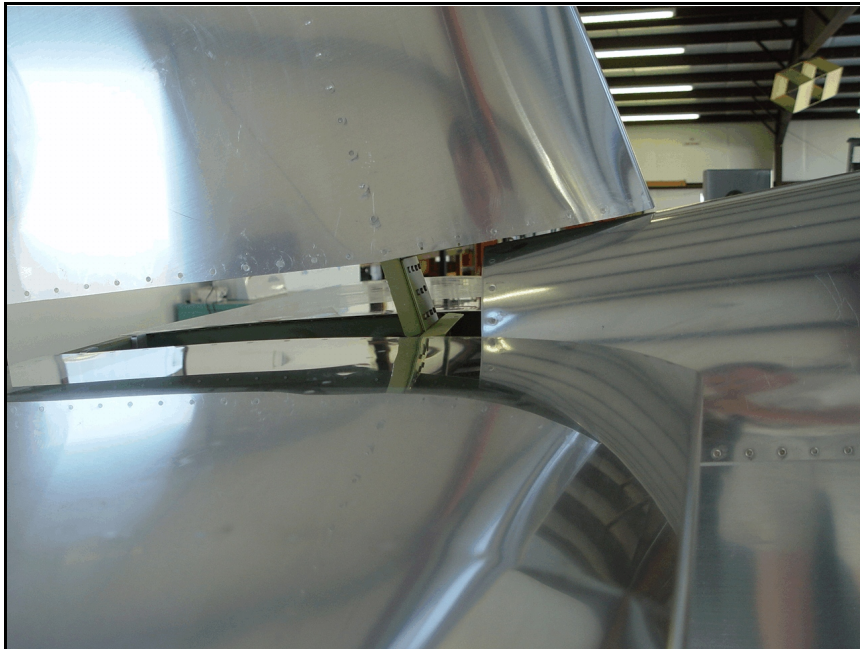


FIGURE 1-1
Vertical Stabilizer Modification

