


## INSTALLATION INSTRUCTIONS FOR RV-12 GLARE SHIELD

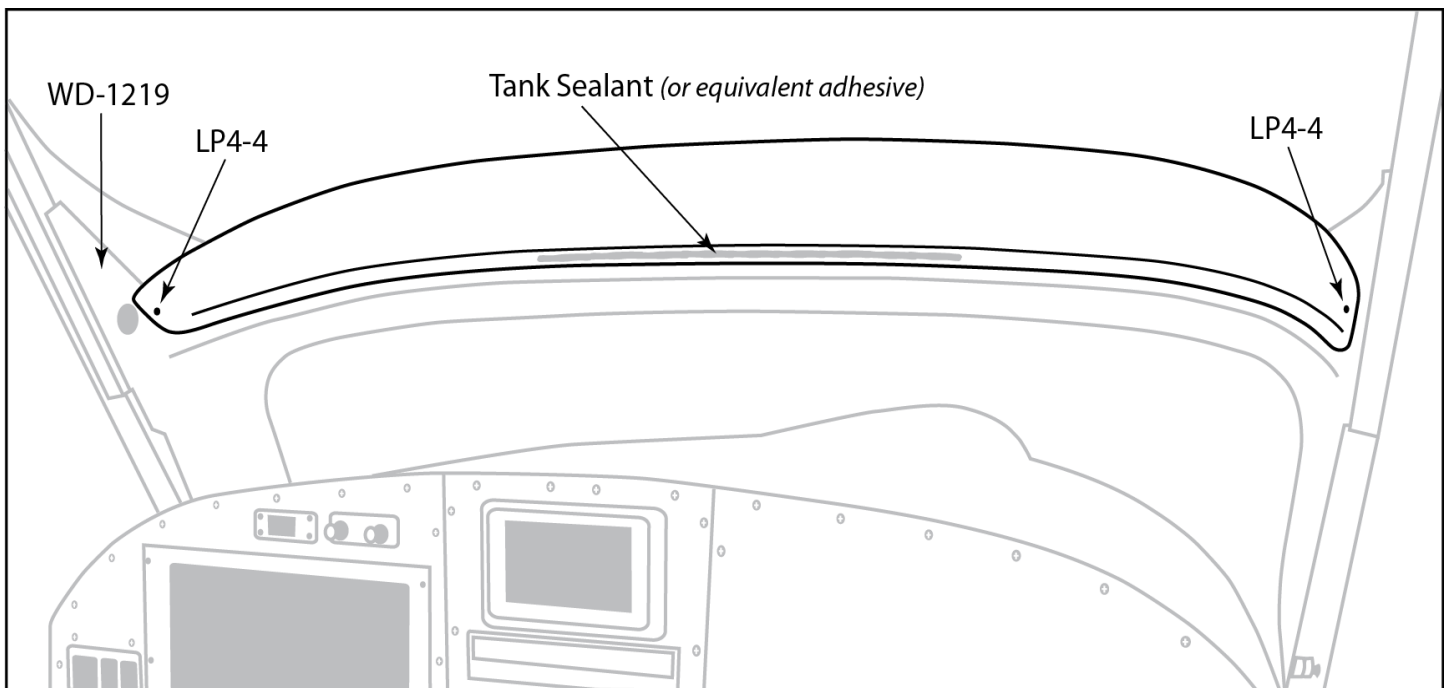

Thank you for purchasing the RV-12 glare shield, these instructions will guide you through the simple installation process.

Your RV-12 glare shield comes ready for installation, trim as if necessary for your aircraft. The glare shield is designed to fit tight against the WD-1219 canopy frame, after locating drill one 1/8" hole in the lower left and right corner of shield (*caution should be used to not damage the bubble when drilling the canopy frame*). Painting is optional and should be completed prior to installation. Apply tank sealant or equivalent adhesive to the center section of the glare shield where it fits tight against the canopy bow and one LP4-4 blind rivet in each corner, masking tape can be used to hold the glare shield in location while adhesive dries. As an option some owners may want to install a protective edging to the glare shield. After the adhesive has fully cured you can cut a piece of 3/8" hose to the length of the aft edge of glare shield then carefully slit down the middle and install.